Drift bushings

For removal and installation of the securing ring on the primary shaft (gearbox)
Use 88 88 6 232 650

NOTE: ***Even though some part numbers are NLA they are listed for reference for those technicians / dealers who are currently using these numbers.***

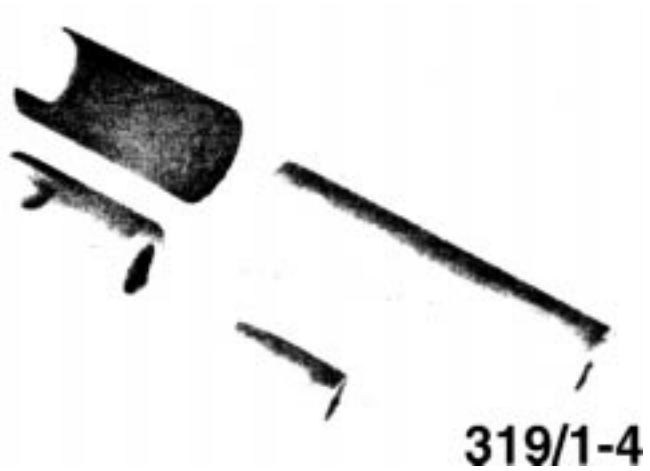

Area of application: **319 / 1-4**

R24, R25, R25/2, R25/3, R26, R27, R50, R50S, R51/2, R51/3, R60, R69, R69S
R50/5, R60/5, R75/5