

SERVICE INFORMATION  
No 1/64 (215) en.

Motorcycles, 1 & 2 Cyl. Models  
Group: Maintenance Services

- 4 -

5. Remove, clean and repack the wheel bearings.
6. Check the wheel spokes for uniform tension; tighten spokes if necessary and center the rims. On motorcycles equipped with light metal rims (special equipment) this point 6 is to be accomplished every 8,000 miles.
7. On the Sports models balance the wheels.
8. Clean the brakes; check the brake drums, shoes, linings, cams and actuating parts.
9. Renew micronic air filter cartridge.
10. Clean generator of carbon dust, clean commutator and check it for smooth running surface; inspect brushes for wear and for smooth fit in the guides. If the motorcycle is operated under especially dusty conditions, this point 10 is to be accomplished every 8,000 miles.
11. On the R 26 and R 27 models remove the complete rear wheel drive from the right swinging arm and repack the pinion coupler gear of the universal shaft with grease.

Time allowance approx. 3 h. 30 m.


On the R 26 and R 27 models an additional time allowance of approx 1 h 30 m for the performance of point 11.

Necessary lubricants, materials, gaskets etc. will be charged for separately.

With its arrival at your end, this new maintenance schedule cancels the hitherto applicable lubrication and maintenance service scheme for the mentioned models.

With friendly greetings

BAYERISCHE MOTOREN WERKE  
Aktiengesellschaft

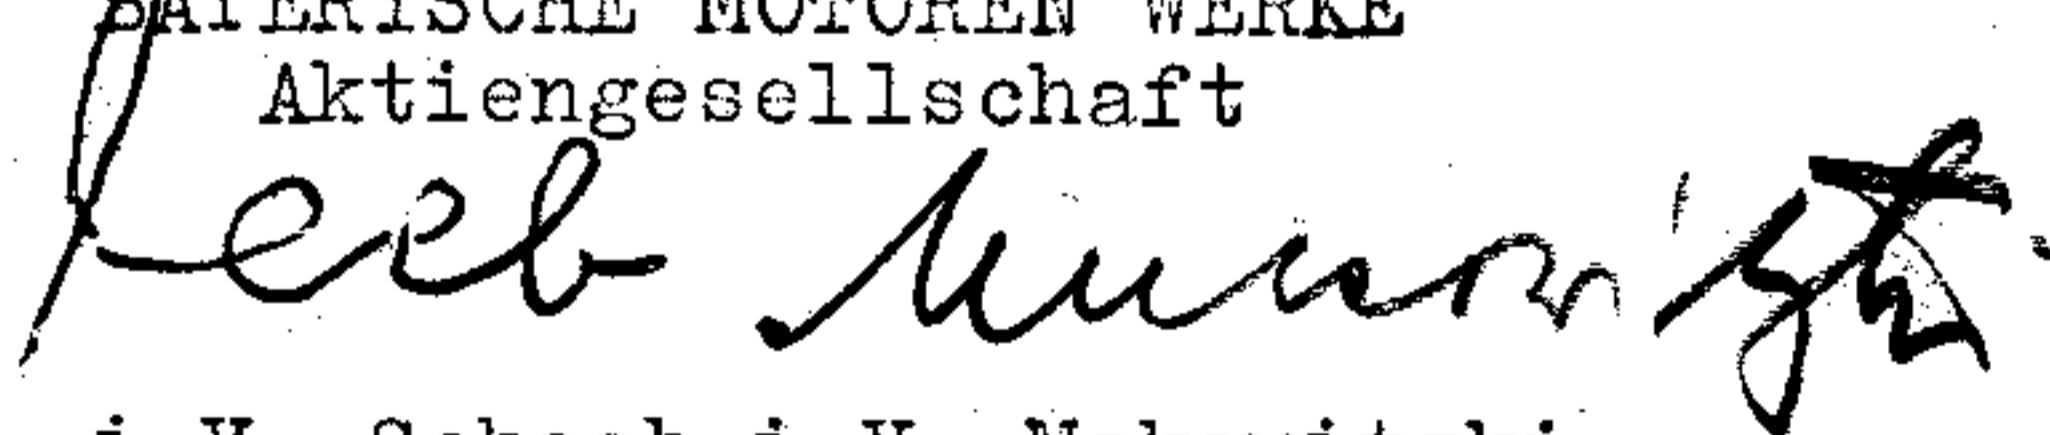

i.V. Schaab i.V. Makowitzki